ausgeknipst
PARTS & ACCESSORIES FOR FILM CAMERAS

EINBAUANLEITUNG · DE

Rückwandhaken für Canon EOS 50E, 55 und Elan II

Ersatz für den gebrochenen Verriegelungshaken der Rückwand · 2er-Set

✓ Lieferumfang und Kompatibilität

Set: 2× Rückwandhaken, diese Anleitung. Der kleine Stift am Haken ist eine Schraube und sitzt schon drin.

Passt an: EOS 50E / 55 / Elan II, EOS 30 / 33 / 30v, EOS 7 / 7s.

Vom alten Haken übernimmst du die Kupferkontakte und die Feder.

Der zweite Haken ist deine Reserve.



Einbauvideo (YouTube)

Bevor du anfängst

Werkzeug: kleiner Kreuzschlitz-Schraubendreher und Pinzette, für den Notfall etwas Sekundenkleber. Nimm vorher Batterie und Film heraus. Leg die Schrauben je Abdeckung getrennt ab (unten fünf, vorn fünf, seitlich zwei), dann kommt jede an ihren Platz zurück.

1 Einbau in 6 Schritten




A · UNTERSEITE

Die fünf Schrauben an der Unterseite der Kamera herausdrehen.




B · FRONTABDECKUNG

Die fünf silbernen Schrauben am Bajonett herausdrehen und die Frontabdeckung abnehmen.

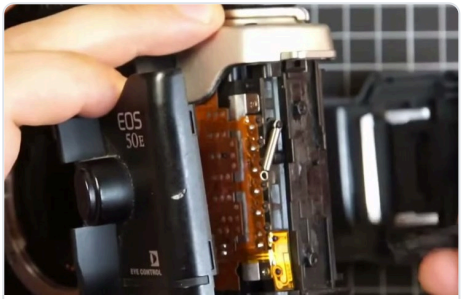

C · SEITLICHE ABDECKUNG

Die zwei Schrauben der Scharnierabdeckung an der Seite lösen und die Abdeckung langsam abnehmen. Der Haken steht unter Federspannung, kleine Teile springen leicht weg.

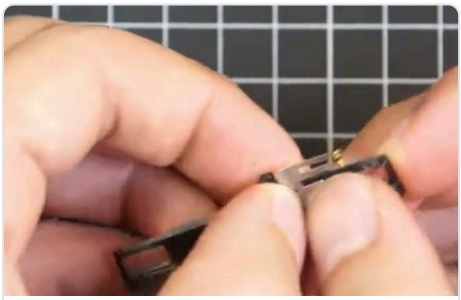

D · KONTAKTE UMSETZEN

Den gebrochenen Haken herausnehmen. Die Kupferkontakte abziehen und auf den neuen Haken stecken, bis sie einrasten. Halten sie nicht, mit einem winzigen Tropfen Sekundenkleber sichern.



E · HAKEN EINSETZEN

Ein Ende der Feder am kleinen Stift des neuen Hakens einhängen (die Pinzette hilft) und den Haken vorsichtig in seine Führung setzen.



F · PRÜFEN UND SCHLIESSEN

Der Haken gleitet leicht, die Feder zieht ihn zurück, der Kupferkontakt liegt auf der Platine. Abdeckungen und Schrauben wieder anbringen, dann die Rückwand schließen und prüfen, ob sie einrastet und die Kamera normal arbeitet.

2 Gut zu wissen

- Die Fotos zeigen die EOS 50E. Bei EOS 30/33 und EOS 7 können Zahl und Lage der Schrauben abweichen.
- Unter der seitlichen Abdeckung liegt ein orangefarbenes Flachbandkabel: nicht knicken, nicht daran ziehen.
- Schau dir das Video vor dem ersten Schrauben einmal ganz an. Es zeigt jeden Schritt in Ruhe.

3 Wenn es hakt

1. **Rückwand rastet nicht ein:** Ist die Feder am Stift eingehängt? Gleitet der Haken frei in seiner Führung, und zieht die Feder ihn zurück?
2. **Kupferkontakte halten nicht:** Mit einem winzigen Tropfen Sekundenkleber fixieren, die Kontaktflächen bleiben frei.
3. **Nach dem Zusammenbau läuft etwas anders als vorher:** Seitliche Abdeckung noch einmal abnehmen. Liegt der Kupferkontakt auf der Platine? Ist das Flachbandkabel eingeklemmt?
4. **Etwas passt nicht:** Schick uns ein Foto an info@ausgeknipst.de, wir schauen es uns an.

Ausgeknipst GbR · Grombühlstrasse 11B · 97080 Würzburg · info@ausgeknipst.de · +49 931 61423127

Back door hook for Canon EOS 50E, 55 and Elan II

Replacement for the broken latch hook of the back door · set of 2

Contents and compatibility

Set: 2× back door hook, this guide. The small pin on the hook is a screw and is already fitted.

Fits: EOS 50E / 55 / Elan II, EOS 30 / 33 / 30v, EOS 7 / 7s.

From the old hook you reuse the copper contacts and the spring.

The second hook is your spare.



Installation video (YouTube)

Before you start

Tools: small Phillips screwdriver and tweezers, plus a little superglue just in case. Take out the battery and film first. Keep the screws of each cover separate (five underneath, five at the front, two at the side) so each one goes back where it came from.

1 Installation in 6 steps




A · UNDERSIDE

Remove the five screws on the underside of the camera.




B · FRONT COVER

Remove the five silver screws around the lens mount and take off the front cover.

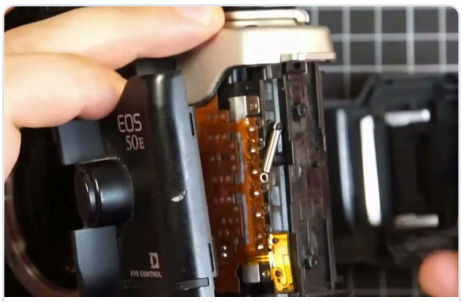

C · SIDE COVER

Undo the two screws of the hinge cover on the side and lift the cover off slowly. The hook is under spring tension, so small parts jump away easily.

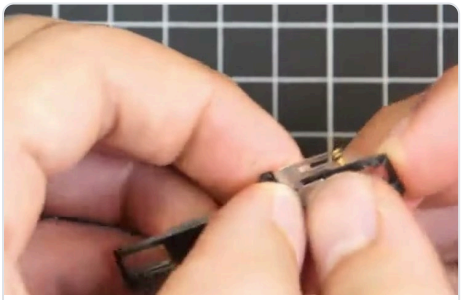

D · MOVE THE CONTACTS

Take out the broken hook. Pull off the copper contacts and push them onto the new hook until they snap in. If they don't hold, secure them with a tiny drop of superglue.



E · FIT THE HOOK

Hook one end of the spring onto the small pin of the new hook (tweezers help) and carefully set the hook into its guide.



F · CHECK AND CLOSE

The hook slides easily, the spring pulls it back, the copper contact rests on the circuit board. Refit the covers and screws, then close the back door and check that it latches and the camera works as usual.

2 Good to know

- The photos show the EOS 50E. On the EOS 30/33 and EOS 7, the number and position of the screws may differ.
- Under the side cover there is an orange ribbon cable: do not kink it or pull on it.
- Watch the video once all the way through before you undo the first screw. It shows every step at a calm pace.

3 If something sticks

1. **Back door doesn't latch:** is the spring hooked onto the pin? Does the hook slide freely in its guide, and does the spring pull it back?
2. **Copper contacts don't hold:** fix them with a tiny drop of superglue, keeping the contact surfaces clear.
3. **Something works differently after reassembly:** take the side cover off again. Is the copper contact resting on the circuit board? Is the ribbon cable pinched?
4. **Something doesn't fit:** send us a photo at info@ausgeknipst.de and we'll take a look.

Ausgeknipst GbR · Grombühlstrasse 11B · 97080 Würzburg · Germany · info@ausgeknipst.de · +49 931 61423127